

USB-P1K USB HAND PHONE FOR SKYPE™

Plug into your computer's USB port, you can make and receive skype calls. Phone rings for all incoming calls, dial skype contacts and skypeOut numbers from the phone. With LCD, keypad and ringer, easy to use just as mobile phone.



Figure



How to install USB P1K

Feature

- With LCD, keypad and ringer, easy to use like mobile phone
- Phone rings for all incoming calls, ring style and volume selectable
- Caller ID function of skype calls
- Dial skype contacts (speed dial number) and skypeout number by phone keypads
- 199 incoming calls and 199 dialed numbers
- Echo cancellation, noise reduction, full duplex communication
- PC-to-PC, PC-to-phone, Phone to Phone operation

Hardware

- No external power required
- USB power LED indicator
- Driver and sound card built-in

Interface

- 1 USB interface to PC

System requirement

- Windows 2000 or XP
- 400 MHz processor and free USB1.1 or USB2.0 port
- 128 MB RAM and 15 MB free disk space
- Internet Connection (33.6 Kbps modem, or any broadband: cable, ADSL.)

XIAMEN YEALINK NETWORK TECHNOLOGY CO.,LTD.

- Website: www.yealink.com and www.skypemate.net
- Email: sales@yealink.com
- Tel: 86-592-570-2000
- Fax: 86-592-570-2455